


DURA SLIMBRIC 12 PANELS


HOW TO INSTALL

To install **Dura SlimBric 12** panels, follow these simple instructions.


The top edge has a 10mm mortar line gap

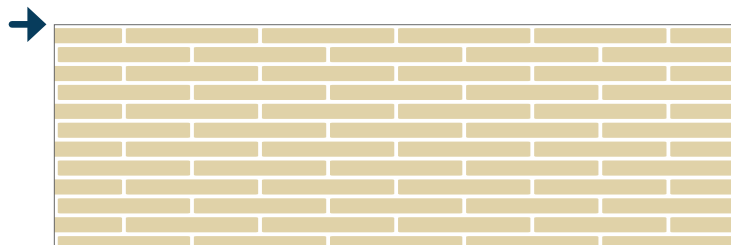

Dura SlimBric 12 looks best installed using an offset layout on alternate rows.

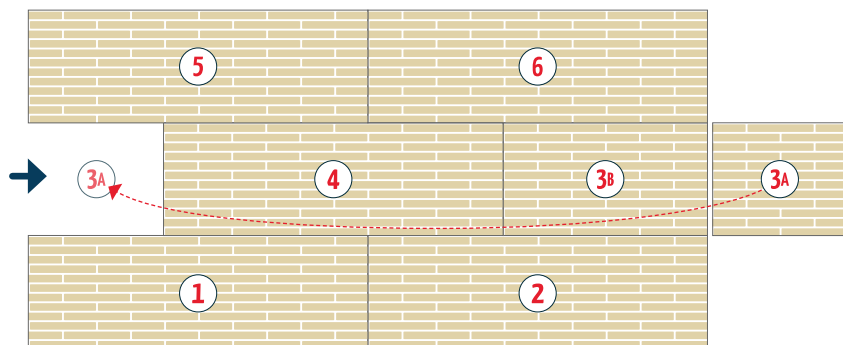


What happens if I use a stacked layout?

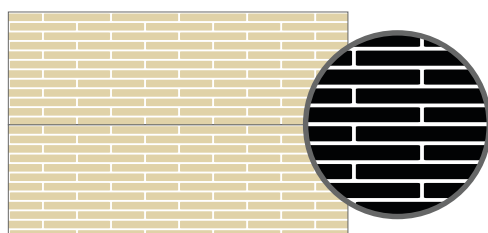

A stacked layout will not alter the brick pattern but panel edges may be more visible.

Dura SlimBric 12 panels should be butt-joined horizontally. Half bricks will align to create full bricks.



BEFORE YOU START

Make sure your **Dura SlimBric 12** panels are the right way up. All panels need to be installed with the 10mm mortar line **at the top**, above the first row of bricks.

Work out the brick pattern

To get an authentic brick pattern we recommend installing **Dura SlimBric 12** panels using an **offset layout**.

Offset each alternate panel row the length of 2 bricks. Cut the panel overhang at the end of the row and use to fill the offset gap.

A stacked layout will also work, however panel edges may be more visible on the finished wall.

PREPARATION

Prepare your panels **before** you start installing.

- 1 Ensure panel edges are free of excess brick.
- 2 Cut part panels required using a masonry disc in a circular saw or angle grinder.
- 3 Mitre corners at 45 degrees.

INSTALLATION

- 1 Install panels over a continuous substrate such as plaster, 6-8mm bracing ply, Gyproc or Blueboard.
- 2 Start by installing the bottom panels (left or right) and work upwards to the top.
- 3 Panels need to be butt-joined. Half bricks on each alternate row will align to create one full brick.
- 4 When fixing panels in place screw through the brickface **not** through mortar lines – 8 screws per panel is recommended.
- 5 Sink screws approx. 2mm into brickface.
- 6 Conceal all screw holes and corner gaps with filler provided.
- 7 Filler supplied is ready to use – **do not add water**.
- 8 To remove excess filler, sand with an offcut piece of DuraBric, brickface-to-brickface.

EXTERIOR INSTALLATION

- 1 Make sure panels and substrate are dry.
- 2 If required, seal the rear of panels with a good quality masonry sealer, to protect from becoming wet after installation.

HOW TO FINISH


DuraBric panels are supplied unfinished.

Go to durabric.com.au/how-to-finish to see our finishing recommendations and inspiration.

03 9357 7221

durabric.com.au

info@durabric.com.au

 **Come and visit our showroom** 1/79 Lara Way, Campbellfield, VIC 3061