


# DURA SLIMBRIC 12 PANELS


## HOW TO INSTALL

To install *Dura SlimBric 12* panels, follow these simple instructions.


The top edge has a 10mm mortar line gap

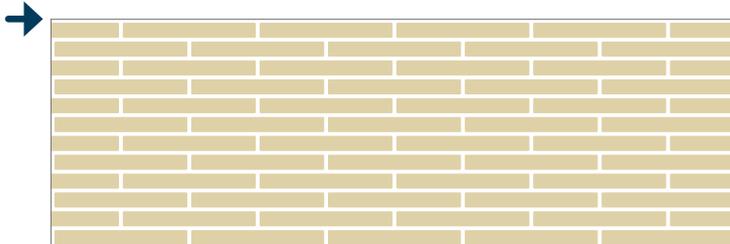

*Dura SlimBric 12* looks best installed using an offset layout on alternate rows.

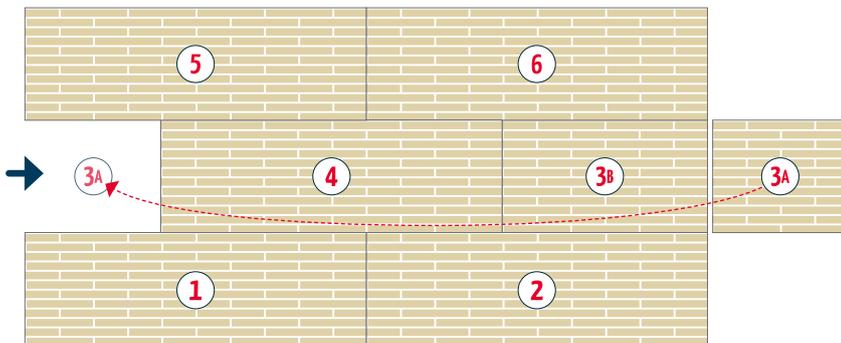


What happens if I use a stacked layout?

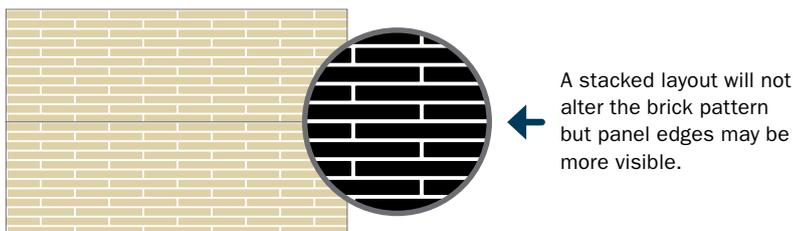

A stacked layout will not alter the brick pattern but panel edges may be more visible.

*Dura SlimBric 12* panels should be butt-joined horizontally. Half bricks will align to create full bricks.



### BEFORE YOU START

Make sure your *Dura SlimBric 12* panels are the right way up. All panels need to be installed with the 10mm mortar line **at the top**, above the first row of bricks.

### Work out the brick pattern

To get an authentic brick pattern we recommend installing *Dura SlimBric 12* panels using an **offset layout**.

Offset each alternate panel row the length of 2 bricks. Cut the panel overhang at the end of the row and use to fill the offset gap.

A stacked layout will also work, however panel edges may be more visible on the finished wall.

### PREPARATION

Prepare your panels **before** you start installing.

- 1 Ensure panel edges are free of excess brick.
- 2 Cut part panels required using a masonry disc in a circular saw or angle grinder.
- 3 Mitre corners at 45 degrees.

### INSTALLATION

- 1 Install panels over a continuous substrate such as plaster, 6-8mm bracing ply, Gyproc or Blueboard.
- 2 Start by installing the bottom panels (left or right) and work upwards to the top.
- 3 Panels need to be butt-joined. Half bricks on each alternate row will align to create one full brick.
- 4 When fixing panels in place screw through the brickface **not** through mortar lines – 8 screws per panel is recommended.
- 5 Sink screws approx. 2mm into brickface.
- 6 Conceal all screw holes and corner gaps with filler provided.
- 7 Filler supplied is ready to use – **do not add water**.
- 8 To remove excess filler, sand with an offcut piece of DuraBric, brickface-to-brickface.

### EXTERIOR INSTALLATION

- 1 Make sure panels and substrate are dry.
- 2 If required, seal the rear of panels with a good quality masonry sealer, to protect from becoming wet after installation.

### HOW TO FINISH

DuraBric panels are supplied unfinished.

Go to [durabric.com.au/how-to-finish](http://durabric.com.au/how-to-finish) to see our finishing recommendations and inspiration.

03 9357 7221

[durabric.com.au](http://durabric.com.au)

[info@durabric.com.au](mailto:info@durabric.com.au)

**Come and visit our showroom** 1/79 Lara Way, Campbellfield, VIC 3061