

# DURA STANDARD 230 PANELS




## HOW TO INSTALL

To install *Dura Standard 230* panels, follow these simple instructions.


The *Dura Standard 230* brick size is 230 × 76mm, the same as a traditional brick.

Two panels, **A** & **B** are needed for a correct brick pattern. Install alternating **A B A B**.


Panel **A** has a ½ brick on the left edge on rows 1, 3, 5 and 7.

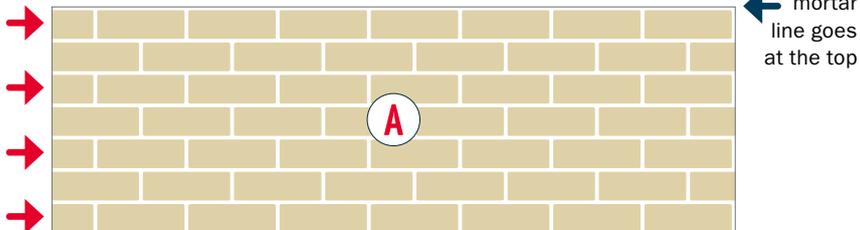


Panel **B** has a ½ brick on the left edge on rows 2, 4 and 6.

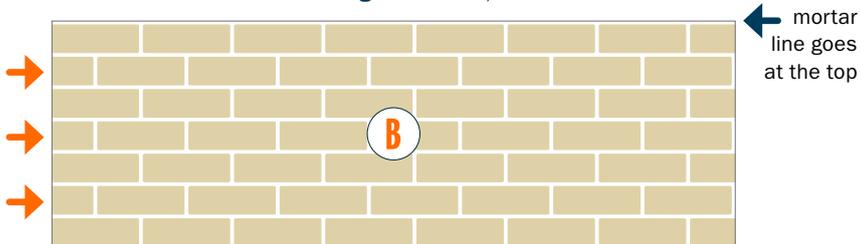


*Dura Standard 230* looks best installed using an offset layout on alternate rows.

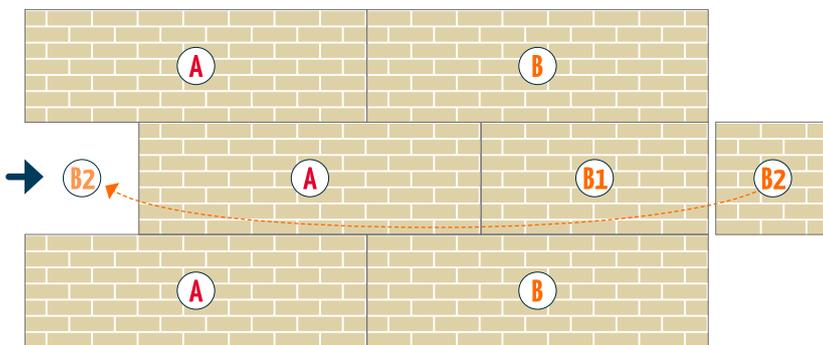

What happens if I use a stacked layout?

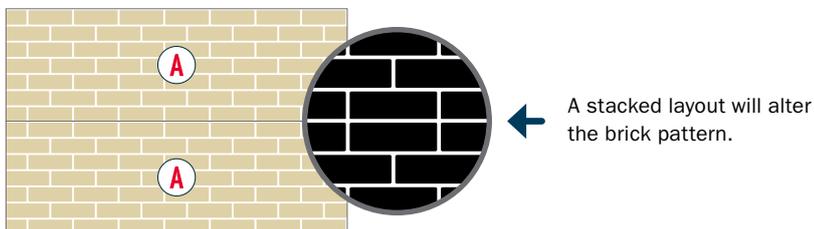

*Dura Standard 230 A & B* panels should be butt-jointed horizontally, ½ bricks will align to create full bricks.

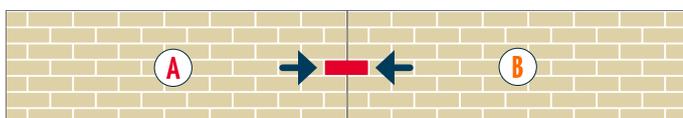

### BEFORE YOU START

Make sure your *Dura Standard 230 A & B* panels are the right way up. All panels need to be installed with the 10mm mortar line **at the top**, above the first row of bricks.

### Work out the brick pattern

Install *Dura Standard 230* panels in an **A-B-A-B** order to get an authentic brick pattern.

Offset each alternate panel row the length of 2½ bricks. Cut the panel overhang at the end of the row and use to fill the offset gap.

A stacked layout will not work, if you want to maintain the brick pattern.

### PREPARATION

Prepare your panels before you start installing.

- 1 Ensure panel edges are free of excess brick.
- 2 Cut part panels required using a masonry disc in a circular saw or angle grinder.
- 3 Mitre corners at 45 degrees.

### INSTALLATION

- 1 Install panels over a continuous substrate such as plaster, 6-8mm bracing ply, Gyproc or Blueboard.
- 2 Start by installing the bottom panels (left or right) and work upwards to the top.
- 3 Panels need to be butt-jointed. Half bricks on each alternate row will align to create one full brick.
- 4 When fixing panels in place screw through the brickface **not** through mortar lines – 10-12 screws per panel is recommended.
- 5 Sink screws approx. 2mm into brickface.
- 6 Conceal all screw holes and corner gaps with filler provided.
- 7 Filler supplied is ready to use – **do not add water**.
- 8 To remove excess filler, sand with an off-cut piece of DuraBric, brickface-to-brickface.

### EXTERIOR INSTALLATION

- 1 Make sure panels and substrate are dry.
- 2 Seal front, back and edges of panels with a good quality masonry acrylic sealer to protect and prevent becoming wet after installation.

### HOW TO FINISH

DuraBric panels are supplied unfinished. For further info go to:

[durabric.com.au/installation/how-to-finish](http://durabric.com.au/installation/how-to-finish)

or [durabric.com.au/gallery/](http://durabric.com.au/gallery/)



1300 665 341

[durabric.com.au](http://durabric.com.au)

[info@durabric.com.au](mailto:info@durabric.com.au)

**Come and visit our showroom** 1/79 Lara Way, Campbellfield, VIC 3061